


INSPECTION PRIOR TO OPERATION


- 8 **Check lift chains**
 Raise the forks 200-300mm above the floor and check the lift chains for equal tension. The mast carriage should be level. If the carriage leans to the right or left, adjust the chain anchor bolts.

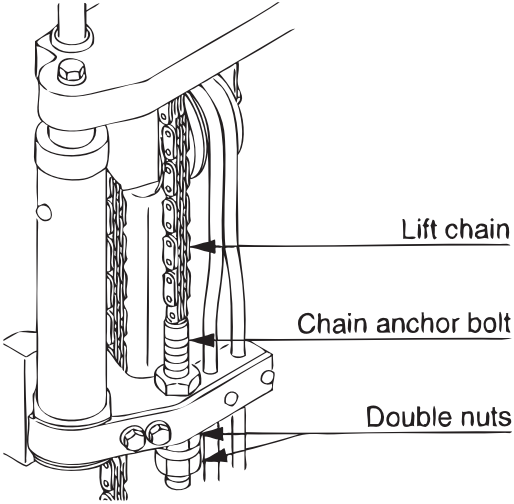

After proper adjustment, tighten up the lock nuts securely.

- 9 **Check tyres**
 Check if each tyre (drive, caster, load) is damaged and/or worn
- 10 **Check charging**
 Measure the specific gravity of battery. When it shows 1.260-1.280 at 20°C conversion, the battery is fully charged.

- 11 **Check overhead guard and load backrest**
 Check if all fitting bolts and nuts are correctly secured and torqued.

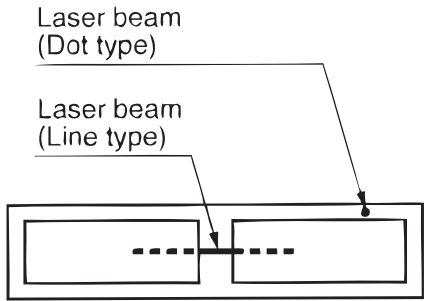

- 12 **Check laser pointer (optional)**
 Check the axis of the laser beam.

- 13 **Other**
 Check for any abnormalities.



Turn the key switch off and disconnect the battery when inspecting the forklift truck with open doors or covers, or when checking electric components except when testing the function.