


INSPECTION PRIOR TO OPERATION

- ⑫ **Check tyres**
Measure the air pressure by using the air pressure gauge.

UNIT: KPa (kgf/cm²)

Applicable model	Front	Rear
FB13TCA-15TCA	900 (9.0)	1 000 (10.0)
FB18TCA	1 000 (10.0)	No puncture
FB20TCA	No puncture	850 (8.5)


After checking air pressure, check that no air is leaking from the valve.

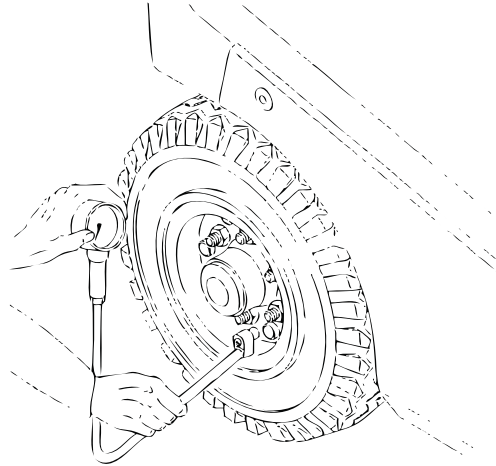

- ⑬ **Check hub nuts**
Check if the hub nuts are secured by tightening them with a torque wrench.

UNIT: N·m (kgf·m)


Applicable model	Front	Rear
FB13TCA-18TCA	216-264 (22-27)	89-108 (9-11)
FB20TCA	216-264 (22-27)	216-264 (22-27)

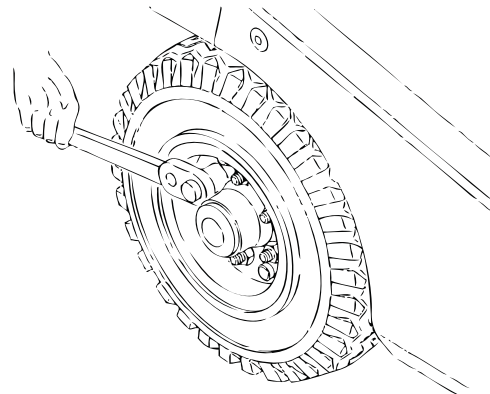

- ⑭ **Check charging**
Measure the specific gravity of battery.
When it shows 1.260-1.280 at 20°C conversion, the battery is fully charged.

- ⑮ **Check overhead guard and load backrest**
Check if all fitting bolts and nuts are correctly secured and torqued.


- ⑯ **Check seat belt**
Check any damages on the tang (A) and buckle (B).

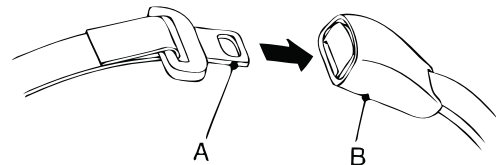

- ⑰ **Check beam of laser pointer (optional)**
If optional laser pointer is equipped, irradiate the beam and check it's focus.

A: Line type

B: Point type

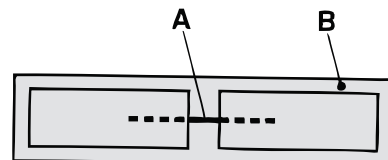

- ⑱ **Other**
Check for any other abnormalities.